

Box contents

- the stroller frame
- •1 front wheel
- •2 rear wheels
- •1 rain cover
- 1 organiser bag



•Undo the clasp on the side. •Lift the stroller by the push bar to unfold the stroller.



2. Rear wheels

Push the button on the wheel.
Place the wheel on the rear axle while holding the button.
Release the button and pull the wheel slightly towards you. You will hear a soft click. Repeat on both sides.

•To release the wheel, press the button on the rear wheel and pull the wheel off of the axle.



5. Folding

·Fold the pushbar down completely.

- •Make sure the front of the cabin is unzipped and the front wheel is unlocked.
- •Pull the release on both sides at the same time, the stroller will now fold automatically.



To apply the brake on the stroller, step with one foot on the centre of the brake bar.

Tip 2

The front wheel can rotate 360°. To prevent the wheel from turning, lock it by turning the dial above the front wheel to the left.



Tip 3

Make sure the cover is always correctly attached to the stroller frame. The fabric should be folded over the frame and secured with the Velcro straps.



3. Front wheel

Push the front fork into the frame with the pin, give it a small tug to confirm that the fork is fixed.
To remove the front wheel, push the button above the front wheel.



4. Push bar

•Push the buttons on the outside of the push bars at the same time to adjust the height of the push bar. ro straps.

•This carrier is for pets only. •Max. capacity 25kg.

- •Use the fastening lines at all times.
- •Fully unzip the cabin before folding.
- •Do not use when nuts or screws are loosening.
- •Clean fabric with mild household soap and water.
- If wheel squeaks or rotates with difficulty, apply grease (like vaseline).
- •Read warranty terms on innopet.nl

ImmoRet Premium Cozy Instruction manual

Contact customer service: +31 (0) 85 079 60 12 support@innopet.nl https://innopet.nl/en/contact Scan the QR code for detailed video instructions for your InnoPet stroller or visit innopet.nl

