

Box contents

- •the stroller frame
- •1 front wheel set
- ·2 rear wheels
- ·1 organiser bag



1. Unfolding

- ·Undo the clasp on the side.
- ·Lift the stroller by the push bar, to unfold the stroller.



2. Rear wheels

- •Push the pin of the rear wheel into the frame.
- •To remove the wheel, pull the metal tab on the underside of the frame near the wheel.



Be sure the front wheel is installed with the arrow pointing towards the frame.



Tip 2

The front wheel can rotate 360 degrees. To prevent the wheel from turning, lock it by pushing the clip on the front wheel upwards.



Tip 3
To attache the organiser bag, fold the velcro strap around the push bar, push the velcro through the loop and fold the velcro back on itself.



3. Front wheel

- •Put the front wheel on the frame, make sure the arrow points towards the frame. (see tip 1)
- •To remove the front wheel, use pliers to push in the latch. Now pull the wheel off of the frame.



4. Fastening cover

- •Make sure the fabric cover is always correctly attached to the frame.
- •The fabric should be folded over the frame and secured with the velcro.



5. Folding

- •Make sure the cabin is open and the front wheel is not locked.
- •Press the button on the push bar and turn the handle away from you and fold down the stroller.
- •Fasten the clasp on the side to prevent unfolding during transport.

Caution **^**

- •This carrier is for pets only.
- ·Max. capacity 28kg.
- ·Use the fastening lines at all times.
- ·Fully unzip the cabin before folding.
- •Do not use when nuts or screws are loosening.
- •Clean fabric with mild household soap and water.
- •If wheel squeaks or rotates with difficulty, apply grease (like vaseline).
- •Read warranty terms on innopet.nl



https://innopet.nl/en/contact

for your InnoPet stroller or visit innopet.nl