

#### **Box** contents

- ·the stroller frame
- •1 front wheel
- ·2 rear wheels
- •1 rear axle
- ·1 cup holder
- •1 mud guard with front fork



- ·Undo the clasp on the side.
- ·Lift the stroller by the push bar to unfold the stroller.



## 2. Rear wheels

- •Push the rear axle onto the frame of the stroller.
- •Put the rear wheels on the axle.
- •To remove the rear wheels, push in the metal clip on the wheel, and pull the wheel off the axle.
- •To remove the rear axle, push in the metal pins near the axle.



The front wheel can rotate 360 degrees. To prevent the wheel from turning, fixate it by turning the switch.



## Tip 2

Pressing in the metal pins to remove the front wheel is easiest with a retractable ballpoint pen.



#### 3. Front wheel

- •Push the mud guard with front fork onto the frame.
- •Push the front wheel connection onto the front fork.
- •To remove the front wheel, press in the metal pins on both sides of the front fork.



# 4. Cup holder

• Take the cup holder and push it over the bars of the frame until the screws fall into the holes of the cup holder.



# 5. Folding

- •Make sure the cabin is unzipped and the front wheel is not locked.
- •On the handlebar, press both the bottom and front button. Now push the push bar down to fold the stroller.
- •Fasten the clasp on the side of the stroller to prevent it from unfolding.

## Caution A

- •This carrier is for pets only.
- ·Max. capacity 30kg
- ·Use the fastening lines at all times.
- ·Fully unzip the cabin before folding.
- •Do not use when nuts or screws are loosening.
- ·Clean fabric with mild household soap and water
- •If wheel squeaks or rotates with difficulty, apply grease (like vaseline).
- •Read warranty terms on innopet.nl



https://innopet.nl/en/contact

for your InnoPet stroller or visit innopet.nl